Girmi

BY TREVIDEA

User manual

Mod.: **AP45**

Technical model: K-614/1000

EN



Wet & Dry Vacuum Cleaner

Stainless steel tank - 15 L

PROTECTION CLASSES



WARNING
ELECTRIC SHOCK RISK
DO NOT EXPOSE TO RAIN OR MOISTURE




WARNING: DO NOT OPEN THE APPLIANCE. THERE ARE NO USER-SERVICEABLE CONTROLS OR SPARE PARTS INSIDE. FOR ALL SERVICE OPERATIONS, PLEASE CONTACT AN AUTHORIZED SERVICE CENTER.

If the appliance bears the symbols below, it means its technical characteristics correspond to the symbol.



This symbol warns the user that un-insulated dangerous voltage inside the system may cause an electrical shock. Do not open the case.

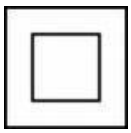

Class II Appliance symbol. The double insulated electrical appliance is one which has been designed in such a way that it does not require a safety connection to electrical earth/ground.



Caution: this symbol reminds the user to read carefully the important operations and maintenance instructions in this owner's guide.

ENGLISH: SAFETY INSTRUCTIONS

The following are important notes on the installation, use and maintenance; save this instruction manual for future reference; use the equipment only as specified in this guide; any other use is considered improper and dangerous; therefore, the manufacturer cannot be held responsible in the event of damages caused by improper, incorrect or unreasonable use.

Before use, ensure the equipment is undamaged; if in doubt, do not attempt to use it and contact the authorized service center; do not leave packing materials (i.e. plastic bags, polystyrene foam, nails, staples, etc.) within the reach of children as they are potential sources of danger; always remember that they must be separately collected.

Make sure that the rating information given on the technical label are compatible with those of the electricity grid; the installation must be performed according to the manufacturer's instructions considering the maximum power of the appliance as shown on the label; an incorrect installation may cause damage to people, animals or things, for which the manufacturer cannot be considered responsible thereof.

If it is necessary to use adapters, multiple sockets or electrical extensions, use only those that comply with current safety standards; in any case do not exceed the power consumption limits indicated on the electrical adapter and / or extensions, as well as the maximum power shown on multiple adaptor.

Do not leave the unit plugged; better to remove the plug from the mains when the device is not in use. Always disconnect from power supply if you leave it unattended.

Cleaning operations should be carried out after unplugging the unit.

If the unit is out of order and you do not want to fix it, it must be made inoperable by cutting power cord.

- Do not allow the power cord to get closer to sharp objects or in contact with hot surfaces; do not pull it to disconnect the plug.
- Do not use the appliance in the event of damage to the power cord, plug, or in case of short circuits; to repair the product only address an authorized service center.
- Do not handle or touch the appliance with wet hands or bare feet. Do not expose the appliance to harmful weather conditions such as rain, moisture, frost, etc.. Always store it in a dry place.
- This appliance can be used by children of 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they received supervision or instruction concerning use of the appliance in a safe way and understand hazards involved; children shall not play with the appliance; cleaning and user maintenance shall not be made by children without supervision.
- Children must not play with the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years.

If the power cord is damaged, or in case of failure and / or malfunction do not tamper with the unit. The reparation must be done by manufacturer or by service center authorized by the manufacturer in order to prevent any risk. Failure to comply with the above may compromise the unit safety and invalidate the warranty.

- Before every use, unroll the power cord.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; by clients in hotels, motels and other residential type environments; farm houses, bed and breakfast type environments.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.

- Use original spare parts and accessories only.
- Do not subject the product to strong impacts, serious damages may result.

Do not use near or under flammable materials (like curtains), heat, cold spots and steam.

GENERAL INFORMATION

Do not vacuum sharp objects, liquids, flammable, explosive or hazardous to health materials, acids, combustible objects such as cigarettes or firebrands.



If you need to remove or change a filter, ensure to assemble it properly and that the filter is not wet or damp. In this case, wait for it to dry completely.

Do not expose the appliance to high temperatures and do not bring it closer to heat sources.

CAUTION: while the unit is running, do not approach the air inlet to the ears, eyes, or to fragile items such as vases, tools or electronic equipment.

Never leave the appliance unattended while it is running. Always use the power button to turn it on or off.

In case of overheating, or if the unit produces smoke, smell or unusual noises, turn it off immediately and check that the pipe is free from obstacles. If the tube is free, contact the service center to fix it.

This vacuum cleaner is designed to clean floors or wet objects, do not use it to pump water or any liquid as it may be damaged.

Disconnect the plug from the electrical outlet immediately after each use. It is recommended to wind the power cord in order to ensure a better cleaning of it and to avoid any risk of damage.

To avoid damages to the power cord, do not step on it.
Do not immerse the motor unit in water or other liquids; clean it with a damp cloth.
Do not turn it upside down especially when there are some liquids inside the container.
Do not use the unit without filters: this can seriously damage the motor avoiding the warranty.

DESCRIPTION AP45

1 – Handle
2 – Motor unit/Cover
3 – Power button
4 – Fabric filter
5 – Suction hole
6 – Stainless-steel tank
7 – Accessories housing
8 – Wheels
9 – Locking tabs
10 – Sponge filter
11 – Floor brush
12 – Flexible hose
13 – 3 plastic tubes
14 – Nozzle with mini-brush

The spare part kit corresponding to model AP46 includes: 1 fabric filter (4) and 1 sponge filter (10).

ASSEMBLING

Start assembling the unit only when the appliance is disconnected to the electrical outlet.









- Before use, it is necessary to assemble the appliance, do not connect it to the power outlet.
- Remove the motor unit (2) lowering the locking hinges (9) of the cover (**Figures 2** and **3**).
- Take out all the components and accessories which are stored inside the tank (**Figure 4**).
- Turn it upside down and mount the wheels supplied by entering their pins in the base holes (**Figure 5)**. Check that the sponge filter is properly installed on the cone at the bottom of the cover (2) of the unit (**Figure 6**).
- Mount one of the 2 filters, based on the operation you have to do:
  - In case of wet vacuuming, mount the sponge filter (10) to the cone at the bottom of the cover (2) of the unit (**Figure 6**).
  - In case of dry vacuuming, insert the fabric filter (4) in the stainless steel tank (6), mounting to the internal part of the suction hole (5).
- Place the cover (2) on the container (6) of the vacuum cleaner (**Figure 7**), aligning the hinges (9) with the notches on the lid and fasten the cover by closing hinges.








Assembling the accessories by following the steps below:

- Fit the flexible hose (12) into the suction hole (5) by pushing the end of the tube into the fill pipe and then turn it clockwise
- Insert the first plastic tube (13) into the free end of the flexible hose (12).
- Perform the same operation to attach the second rigid tube (13) to the first one.
- Insert the chosen tool, brush (11) or nozzle (14), at the end of the rigid tube.

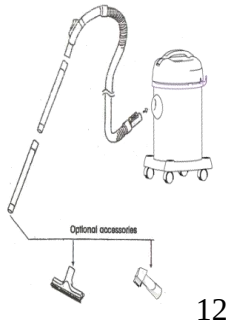

OPERATING

Push the ON/OFF button (3) to switch on or off the unit.

Vacuum cleaner

Warning: This product is not suitable for suction of sharp or pointed objects, flammable, explosive or hazardous to health, acids, combustible objects such as cigarettes, burning embers, matches or ashes.

This vacuum cleaner includes two filters, which must be mounted properly.

- **Sponge filter (10):** for vacuuming on wet surfaces. For each use, make sure that the filter is mounted correctly, and that covers the entire surface of the cone.
- **Main filter (4)** for dry vacuuming. For each use, make sure that the filter is mounted correctly.

Air blowing mode

On the back of motor unit (2) there is the air outlet. Simply get stuck on the hose to use the product as a blower, to move dirt from corners otherwise not accessible.

Setting the airflow

There is an opening on the handle of the flexible hose (12) which controls the airflow volume (**see figure**). Open or close the opening to set the desired suction power.

ACCESSORIES

Wet&Dry brush: use for vacuum cleaning on wet and dry floors and carpets as well
Nozzle: for corners, baseboards, small spaces, etc. ...
Mini-brush: for cleaning libraries, windows and vacuum crumbs.

MOTOR PROTECTION DEVICE

The motor is protected by a device, which comes into action when the water level inside the tank (6) is too high; or if the motor is overloaded due to a filling of the air flow (dirty filter, accessories blocked by an object, overflow).

The activation of the protection device causes a very loud noise. In this case, IMMEDIATELY turn off the power, unplug the unit and check the reason why the protective device has started:

- If the container is full, empty the container.
- If the filter is very dirty, clean it.
- If something blocks the attachment, remove the obstacle

MAINTENANCE AND CLEANING

MAINTENANCE

The filters should be cleaned periodically. In addition, the filtering efficiency can run out over time. It is advisable to replace the filter after 50 hours of use approx. Do not operate without filter. **When one of the filters runs out or breaks, it must be replaced**.

Always ask for original spare parts; the filters kit is model “Girmi AP46”.

MAIN FILTER (44) CLEANING

When the main filter is dirty it should be washed to ensure good performances.

- Extract the filter (4) from the container (6) and open the end by removing the white tab.
- Empty the cloth filter into a waste bin.
- For more thorough cleaning, turn the bag inside out and slam or blow the inside.
- Turn the bag inside out again, close with the white tab and reassemble the filter (4)

SPONGE FILTER (10) CLEANING

The sponge filter should be cleaned periodically. Remove it from the lid and rinse it in warm water for removing the dirt. At least partially dry it before assembling.

INNER TANK (6) CLEANING

Unhook the body and remove the dust bag, if it is mounted. It is recommended to empty the trash container before reaching the maximum capacity, as to prevent the engine from overheating. In any case, empty the tank when you hear a change in the sound emitted by the device.

After having drained, directly rinse it with water to complete cleaning.

GENERAL CLEANING

Before carrying out any cleaning operation, make sure that the plug is disconnected from the electrical outlet. Clean the body of the product with a damp non-abrasive cloth, avoiding the use of aggressive detergents or abrasive cleaners, which could ruin the aesthetic parts of the device. The cloth should not be too wet, because if the water penetrates into the motor unit it can seriously damage it.

STORING THE UNIT

Wait until the complete cooling of each part.
Disconnect the power plug, rewind the cable and hang it on the hook on the head of the product.
Remove all accessories and stick them in the 4 slots on the base (7). In this way it is possible to store the product in a small space.

TECHNICAL FEATURES

- Power supply: AC 220-240V~50-60Hz - Power: 1000W
- Tank capacity: 15 litres
- Accessories: flexible hose, plastic tubes, floor brush, nozzle, 4 wheels, 2 filters.
- Accessories housing located on the base
- Motor protection device
- Power cord length: 3.5 metres

WASTE OF ELECTRIC AND ELECTRONIC EQUIPMENT

The product is made of non-biodegradable and potentially polluting substances if not properly disposed of; other parts can be recycled. It’s our duty to contribute to the ecological health of the environment following the correct procedures for disposal. The crossed out wheelie bin symbol indicates the product complies with the requirements of the new directives introduced to protect the environment (2002/96/EC, 2003/108/EC, 2002/95/EC, 2012/19/EC) and must be properly disposed at the end of its lifetime. If you need further information, ask for the dedicated waste disposal areas at your place of residence. Who does not dispose of the product as specified in this section shall be liable according to the law.

SERVICE

To find the nearest service center, please call the telephone number 0541 694246, fax number 0541 756430 or contact us at assistenzatecnica@trevidea.it asking for the service centers supervisor.

Appliance is conform to the pertinent European regulation and is therefore marked with the CE mark.

www.girmi.it – TREVIDEA S.r.l.
TREVIDEA S.R.L. – Strada Consolare Rimini – San Marino n. 62 – 47924 – RIMINI (RN) - ITALY
MADE IN CHINA